
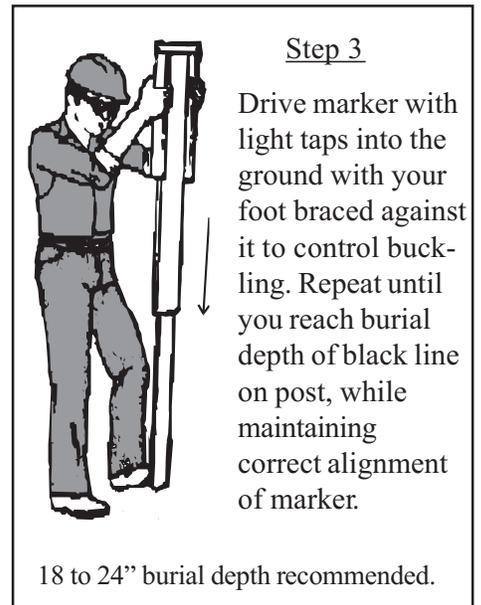


# Installation Instructions


## Flat Posts

**CAUTION:** Use and wear the correct safety equipment.  
Please read and follow instructions for your safety.

In most cases the Rhino 1-Rail™, 3-Rail™, 4-Rail™, FiberCurve™, PlastiCurve™, Hybrid 3-Rail™ and Hybrid 4-Rail™ Markers can be quickly installed in three easy steps.

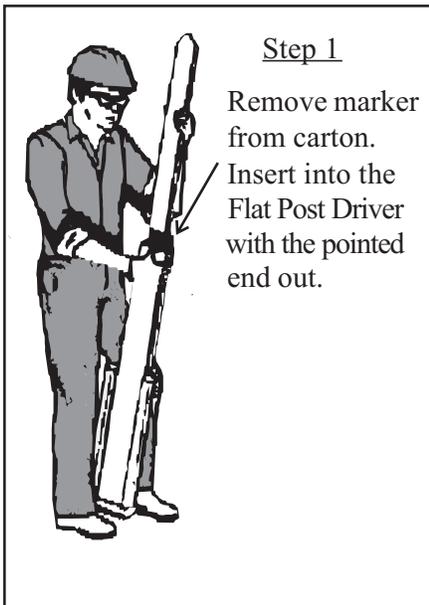


### Hardpan or Rocky Soil Installation

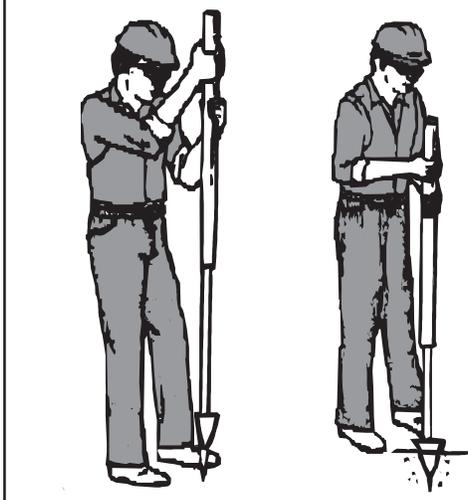

The Pilot Hole Driver is a quick way to prepare the ground when a starter hole is necessary. Follow this procedure:


- Align driver spade in the position you wish the marker to face.
- Use blows until spade is driven into the ground and driver stop is level with the ground.
- Remove driver with upward stroke and proceed with normal installation.

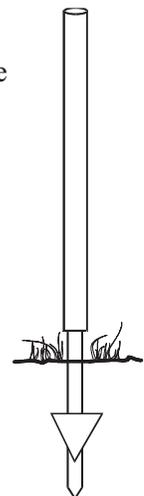




# Installation Instructions

## Drivers For Flat Posts

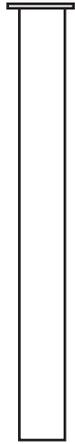


FPD-33N

Is used for:  
1-Rail posts only

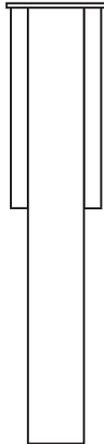

FPD-34

Is used for:  
1-Rail, 3-Rail, 4-Rail,  
FiberCurve and PlastiCurve  
posts from 48" to 66" long.




FPD-44

Is used for:  
1-Rail, 3-Rail, 4-Rail,  
FiberCurve and PlastiCurve  
posts from 60" to 72" long.




FPD-54

Is used for:  
1-Rail, 3-Rail, 4-Rail,  
FiberCurve and PlastiCurve  
posts from 78" or longer.



HPD-45

Is used for:  
Hybrid 3-Rail and Hybrid  
4-Rail posts 66" to 72" long.



PHD-100

Is used for:  
any of the flat posts.