

# **WINEGARD®**


## **Non-Penetrating Roof Mount**

**Model DS-5046 or  
Model DS-5047 (w/Rubber Mat)**


**Made in U.S.A.**

### **INSTRUCTIONS**

**STEP 1:** Attach Winegard satellite antenna mount foot to frame with (4) 1/4-20 x 1" bolts, (4) 1/4-20 nuts and (8) 1/4 washers through holes indicated below (mount not shown for clarity).

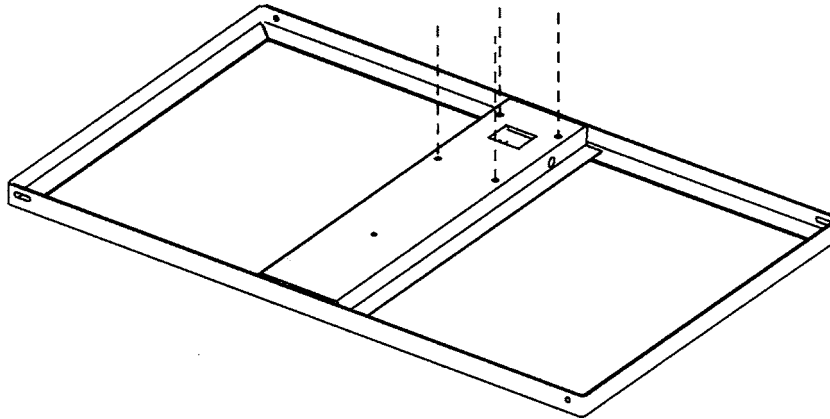

**STEP 2:** Place up to six (6) concrete blocks as shown below (mount not shown for clarity).

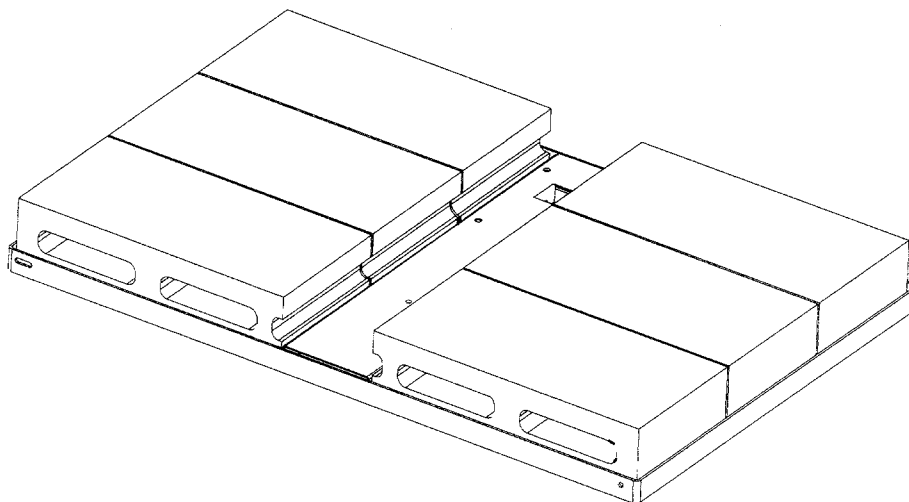

#### **WINEGARD MOUNT DISCLAIMER**

To insure maximum safety, Winegard recommends no installation be attempted without a professional engineer's structural analysis. Local zoning and/or building codes and insurance companies may require architect or structural engineer approval prior to installation. It is the purchaser's responsibility to verify that the above steps are taken.